
#### **Specifications**

Item	ications	CA 210/LED Universal Measuring (827 Probe)	CA-310 (LED Universal Measuring Ø10 Probe)	CA 210 (LED Elickor Mansuring Ø27 Broba)	CA 210 (LED Elickor Monsuring Ø10 Prob				
Receptor		Detector: Silicon photo cell	CA-310(LED Offiversal Measuring Ø10 Probe)	CA-310 (LED FIICKET Measuring Ø27 Probe)	CA-510 (LED FIICKET Measuring Ø10 Probi				
		Ø27mm	Ø10 mm	Ø27 mm	Ø10 mm				
Measurement area		±2.5°	±5°		±5°				
Acceptance angle Measurement distance				±2.5°					
		30±10 mm	30±5 mm	30±10 mm	30±5 mm				
Display	Luminance	0.0001 to 1000 cd/m <sup>2</sup>	0.0001 to 3000 cd/m <sup>2</sup>	0.0001 to 1000 cd/m <sup>2</sup>	0.0001 to 3000 cd/m <sup>2</sup>				
ange	Chromaticity	Displayed in 4 or 3-digit value (Can be chos		In annual 17	I				
Luminance	Measurement range	0.0050 to 1000 cd/m <sup>2</sup>	0.0150 to 3000 cd/m <sup>2</sup>	0.0050 to 1000 cd/m <sup>2</sup>	0.0150 to 3000 cd/m <sup>2</sup>				
	Accuracy	0.0050 to 0.0999 cd/m <sup>2</sup> ±4%±0.0015 cd/m <sup>2</sup>	0.0150 to 0.2999 cd/m <sup>2</sup> ±4%±0.0045 cd/m <sup>2</sup>	0.0050 to 0.0999 cd/m <sup>2</sup> ±4%±0.0015 cd/m <sup>2</sup>	0.0150 to 0.2999 cd/m <sup>2</sup> ±4%±0.0045 cd/n				
	(for white)*1	0.1000 to 9.999 cd/m <sup>2</sup> ±3%±0.0010 cd/m <sup>2</sup>	0.3000 to 29.99 cd/m <sup>2</sup> ±3%±0.0030 cd/m <sup>2</sup>	0.1000 to 9.999 cd/m <sup>2</sup> ±3%±0.0010 cd/m <sup>2</sup>	0.3000 to 29.99 cd/m <sup>2</sup> ±3%±0.0030 cd/n				
		10.00 to 1000 cd/m <sup>2</sup> ±2%±0.0010 cd/m <sup>2</sup>	30.00 to 3000 cd/m <sup>2</sup> ±2%±0.0030 cd/m <sup>2</sup>	10.00 to 1000 cd/m <sup>2</sup> ±2%±0.0010 cd/m <sup>2</sup>	30.00 to 3000 cd/m <sup>2</sup> ±2%±0.0030 cd/n				
	Repeatability(2σ) *1	0.0050 to 0.0999 cd/m <sup>2</sup> 1% + 0.0010 cd/m <sup>2</sup>	0.0150 to 0.2999 cd/m <sup>2</sup> 1% + 0.0030 cd/m <sup>2</sup>	0.0050 to 0.0999 cd/m <sup>2</sup> 1% + 0.0010 cd/m <sup>2</sup>	0.0150 to 0.2999 cd/m <sup>2</sup> 1% + 0.0030 cd/m				
		0.1000 to 0.9999 cd/m <sup>2</sup> 0.2% + 0.0010 cd/m <sup>2</sup>	0.3000 to 2.999 cd/m <sup>2</sup> 0.2% + 0.0030 cd/m <sup>2</sup>	0.1000 to 0.9999 cd/m <sup>2</sup> 0.2% + 0.0010 cd/m <sup>2</sup>	0.3000 to 2.999 cd/m <sup>2</sup> 0.2% + 0.0030 cd/i				
		1.000 to 1000 cd/m <sup>2</sup> 0.1%+0.0010 cd/m <sup>2</sup>	3.000 to 3000 cd/m <sup>2</sup> 0.1% + 0.0030 cd/m <sup>2</sup>	1.000 to 1000 cd/m <sup>2</sup> 0.1%+0.0010 cd/m <sup>2</sup>	3.000 to 3000 cd/m <sup>2</sup> 0.1% + 0.0030 cd/r				
Chromatcity	Measurement range	0.0500 to 1000 cd/m <sup>2</sup>	0.1500 to 3000 cd/m <sup>2</sup>	0.0500 to 1000 cd/m <sup>2</sup>	0.1500 to 3000 cd/m <sup>2</sup>				
	Accuracy *1	0.0500 to 4.999 cd/m <sup>2</sup> ±0.005 for white			0.1500 to 14.99 cd/m <sup>2</sup> ±0.005 for whi				
	(temperature:23°±2°,				15.00 to 59.99 cd/m <sup>2</sup> ±0.004 for whi				
	relative humidity:	20.00 to 1000 cd/m <sup>2</sup> ±0.003 for white		20.00 to 1000 cd/m <sup>2</sup> ±0.003 for white	60.00 to 3000 cd/m <sup>2</sup> ±0.003 for whit				
	(40±10)%))	120 cd/m <sup>2</sup> ±0.002 for white		120 cd/m <sup>2</sup> ±0.002 for white					
	D   -	(±0.004 for monochrome)*2	(±0.004 for monochrome)*2	(±0.004 for monochrome)*2	(±0.004 for monochrome) <sup>1</sup> 0.1500 to 0.2999 cd/m <sup>2</sup> 0.010				
	Repeatability(2σ) *1	0.0500 to 0.0999 cd/m <sup>2</sup> 0.010 0.1000 to 0.1999 cd/m <sup>2</sup> 0.004	0.1500 to 0.2999 cd/m <sup>2</sup> 0.010 0.3000 to 0.5999 cd/m <sup>2</sup> 0.004	0.0500 to 0.0999 cd/m <sup>2</sup> 0.010 0.1000 to 0.1999 cd/m <sup>2</sup> 0.004					
			0.6000 to 1.499 cd/m <sup>2</sup> 0.002	0.2000 to 0.4999 cd/m <sup>2</sup> 0.002	0.6000 to 1.499 cd/m <sup>2</sup> 0.002				
1: 1			1.500 to 3000 cd/m <sup>2</sup> 0.001	0.5000 to 1000 cd/m <sup>2</sup> 0.001	1.500 to 3000 cd/m <sup>2</sup> 0.001				
licker Contrast	Measurement range		-	5 cd/m² or higher	15 cd/m² or higher				
method	Display range		-	0.0 ~ 999.9 %					
	Accuracy		-	±1 % (Flicker frequency: 30 Hz AC/DC 10% sine wave) ±2 % (Flicker frequency: 60 Hz AC/DC 10% sine wave)					
	D  -								
II I IFITA	Repeatability(2σ)		-	1 % (Flicker frequency: 20 to 65 Hz AC/DC 10% sine wave)					
licker JEITA nethod *3	Measurement range		-	5 cd/m² or higher 15 cd/m² or higher					
nethod "5	Accuracy		-	±0.5 dB (Flicker frequency: 30 Hz AC/DC 10% sine wave)					
	Repeatability(2σ)	0.00504 0.0000 1/ 3.4/2.5)4;	- In out to 2000 It 2 4/2 52 1	0.3 dB (Flicker frequency: 30 Hz AC/DC 109					
Measure- ment	xyL <sub>v</sub>		0.0150 to 0.2999 cd/m <sup>2</sup> 4(3.5) times/sec.	0.0050 to 0.0999 cd/m² 4(3.5) times/sec.					
speed*4		0.1000 to 1.999 cd/m <sup>2</sup> 5(4.5) times/sec.		0.1000 to 1.999 cd/m <sup>2</sup> 5(4.5) times/sec.					
		1 1			6.000 to 3000 cd/m <sup>2</sup> 20(17) times/se				
	Flicker Contrast		-	16(16) times/sec.					
	Flicker JEITA *3		-	0.5 (0.3)times/sec. *5					
Display	Digital	xyL <sub>v</sub> , T∆uvL <sub>v</sub> , RGB analyze, XYZ, u'v'L <sub>v</sub>		xyL <sub>w</sub> , T∆uvL <sub>w</sub> , RGB analyze, XYZ, u'v'L <sub>w</sub> , Flicker (Contrast method) *3					
	Analog	$\Delta x \Delta y \Delta L_w$ , R/G B/G $\Delta G$ , $\Delta R$ B/R G/R, Flicker (Contrast method) *3							
	LCD	16 characters by 2 lines (with backlight)							
SYNC mode		NTSC, PAL, EXT, UNIV, INT		Dr					
Object unde	er measurement	Vertical synchronization frequency: 40 to 200 Hz  Vertical synchronization frequency: 40 to 200 Hz (Luminance or chromaticity measurement), 40 to 130 Hz (Flicker measurement)							
Memory channel		100 channels							
nalyzer fun	nction	Standard function							
Interface		USB; RS-232C (38,400 bps or below)							
Multi-point Measurement		Max. 5 points (Use 4-Probe Expansion Board CA-B15)							
Operating temperature/humidity range  Storage temperature/humidity range		Temperature: 10 to 28°C; relative humidity 70% or less with no condensation  Luminance change: ±2% of reading for white							
		Chromaticity change ±0.002 for white, ±0.006 for monochrome from reading of Konica Minolta's standard LCD *1, 120 cd/m², with 23°C 40%							
		$0$ to $28^{\circ}$ C: relative humidity 70% or less with no condensation 28 to $40^{\circ}$ C: relative humidity 40% or less with no condensation							
nput voltage range		100-240V∼, 50-60 Hz, 50 VA							
Size/weight Main body		340(W)×127(H)×216(D) mm/3.58 kg							
size/weight	Probe	Ø49×208 mm / 530 g	Ø49×236 mm / 550 g	Ø49×208 mm / 530 g	Ø49×236 mm / 550 g				

\*3 Measurement of flicker (JETA method) is supported by SDK software. \*4 Measuring probe connected to probe connector P1 only, used USB(used RS-232C Baud rate; 38400 bps) \*5 Measured by Konica Minolta's PC (P3-600 MHz)



- Select the desired type of LED Universal Measuring type probe or LED Flicker Measuring type probe.
- Contains mercury in the backlighting of LCD used for display, dispose according to local, state or federal laws.
- KONICA MINOLTA and the Konica Minolta logo and the symbol mark, and "The essentials of imaging" are registered trademarks or trademarks of KONICA MINOLTA HOLDINGS, INC.
- Screens shown are for illustration purpose only The specifications and drawings given here are subject to change without prior notice.

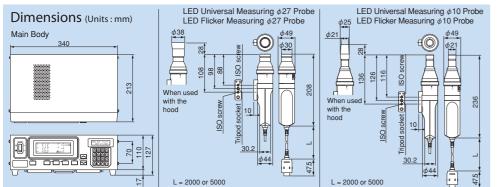

#### **SAFETY PRECAUTIONS**

For correct use and for your safety, be sure to read the instruction manual before using the

• Always connect the instrument to the specified power supply voltage. Improper connection may cause a fire or electric shock.





Fax: 201-785-2482

Fax: +33(0)1 493-84771

Fax: +39 02 39011.223

Fax: +41(0)43 322-9809

Fax: +46(0)31 474945 Fax: +48(0)71 734 52 10

Fax + +86-(0)21-5489 0005

Fax: +86-(0)10-8522 1241 Fax: +86-(0)20-3826 4223

Fax: +86-(0)23-6773 4799

Fax : +44(0)1908 540-629

New Jersey, U.S.A. French Office UK Office Italian Office Swiss Office

Polish Office Konica Minolta (CHINA) Investment Ltd. SE Sales Division Beijing Branch Guangzhou Branch

Konica Minolta Sensing Singapore Pte Ltd. KONICA MINOLTA SENSING, INC. Seoul Seoul Office Seoul, Korea Addresses and telephone/fax numbers are subject to change without notice. For the latest contact information, please refer to the KONICA MINOLTA SENSING Worldwide Offices web page

Wrociaw, Poland Shanghai, China Beijing, China Guangdong, China Chongqing, China Shandong, China Hubei, China Phone: +86-(0)532-8079 1871 Phone: +86-(0)27-8544 9942 Phone: +65 6563-5533 Fax: +65 6560-9721 **Phone:** +82(0)2-523-9726 Fax: +82(0)2-523-9729

Phone: +31(0)30 248-1193 Phone: +49(0)89 4357 156 0

Phone: +33(0)1 493-82519

Phone: +39 02 39011.1

Phone: +44(0)1908 540-622

Phone: +41(0)43 322-9800

Phone: +46(0)31 7099464 Phone: +48(0)71 33050-01

Phone: +86-(0)21-5489 0202

Phone: +86-(0)10-8522 1551 Phone: +86-(0)20-3826 4220

Phone: +86-(0)23-6773 4988

Phone: 888-473-2656(in USA), 201-236-4300(outside USA)

Nieuwegein, Netherlands München, Germany

Roissy CDG, France

Wroclaw, Poland

Dietikon, Switzerland

Västra Frölunda, Sweder

#### http://konicaminolta.com/instruments/about/network



KONICA MINOLTA

# **Display Color Analyzer CA-310**

**Support for LED backlights** 



# Enables high-accuracy adjustment of LED-backlit LCD TVs white balance and greatly improves work efficiency.

### White balance adjustment has advanced even further!

Our previous Display Color Analyzer CA-210 could adjust the white balance of LED-backlit LCD TVs to  $\Delta xy=0.010$ , but the new Display Color Analyzer CA-310 enables adjustment to  $\Delta xy=0.003$  so colors are even more true, as can be seen below.

#### White balance adjustment of LED -backlit LCD TVs



## **Enables high-speed measurement of even** extremely low luminances down to 0.005 cd/m<sup>2</sup>

**System Diagram** 

Muli-Probe (Optional)\*1

0

CA-H11 (Standard)

Standard Lens Cap for CA-210/310

Small Lens Cap for CA-210/310 CA-HS11 (Standard)

Sensor noise reduction technology has been used to enable measurements even in the extremely low luminance region around 0.005 cd/m<sup>2</sup> at speeds as fast as 4 times per second. This allows the high-speed high-accuracy measurement essential for manufacturing high-grade displays. In addition, at luminances higher than 2.0 cd/m<sup>2</sup>, 20 measurements per second are possible.

Probe Variations table at right.

Universal Measuring Ø27 Probe.)

(Illustration shows the LFD)





#### \*2 · Standard accessory SDK helps PC (Commercially available) 4-Probe Expansion Board create software easily according PC-AT compatible CA-B15 USB Cable IF-A18 · Sample software is bundled; you (Optional) (Optional) \*1 Four types of probes (code length: Sample software Color refer to the Probe Variations table 0 2948 0 193.63 Standard Hood for CA-210/310 PC Software 0.3013 0.3012 05.12 CA-H10 (Standard) for Color Analyzer Small Hood for CA-210/310 Select the desired probe from the (Standard)\*2 CA-HS10 (Standard)

AC Power Cord

#### Reduces errors due to LED emission distribution variations to less than 1/3.

Variations in the emission distribution of LED backlights result in individual differences of about 10nm in peak intensity wavelength. If LED-backlit LCD TVs with such individual differences are adjusted using conventional color analyzers, color differences of close to 0.010 on the xy chromaticity diagram may occur. But the CA-310 has sensor sensitivities that more closely match the CIE 1931 color-matching functions, enabling the color difference in the same case to be reduced to around 0.003, suppressing errors to less than 1/3.

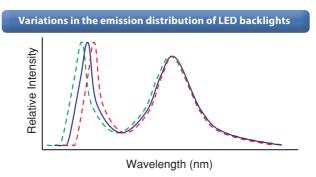

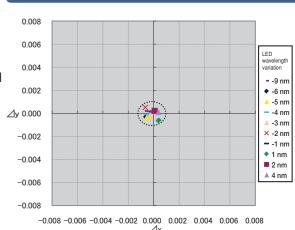

Measurement errors for LED backlights

\*Errors (differences from true values) for white LEDs with different peak wavelengths when measured using CA-310. User calibration to standard LED performed

CA-310 Probe

Number of digits for luminance display increased, enabling display to 0.0001 cd/m<sup>2</sup>.



**Expandable up** expansion board CA-B15)

LED Flicker Measuring Probe

#### **Probe variations**

This table is based on the most popular method for controlling emission intensity for each display type.

\*Measurements of displays using certain control methods are not possible. For details of measurement compatibility, contact your nearest Konica Minolta representa Examples for which measurement is not possible

- Displays which use PWM, etc. for control of er

Displays with backlights which emit intermittently.						
Displays which write black for e etc.  O Recommended  A Measurement possible with res		s marked with O are recommended	<b>Ø27 Probe CA-PU32</b> (2m) <b>CA-PU35</b> (5m)	Ø10 Probe CA-PSU32 (2m) CA-PSU35 (5m)	<b>Ø27 Probe CA-P32</b> (2m) <b>CA-P35</b> (5m)	Ø10 Probe CA-PS32 (2m) CA-PS35 (5m)
× Measurement not possible						
Applicability for dif	ferent dis	play types				
Transmissive / semi-transmissive LCD		Active Matrix Driven	0	0	0*	0*
		Passive Matrix Driven	0	0	×	×
	LCD	Active Matrix Driven	0	Δ	0*	Δ*
Daay Cayaan Dualaatay		Passive Matrix Driven	0	Δ	×	×
Rear Screen Projector	DLP		0	Δ	×	×
	CRT		0	Δ	×	×
OLED Active Matrix Driven			0	0	0*	0*
OLED		Passive Matrix Driven	0	0	×	×
PDP			0	Δ	×	×
FED	•	<u> </u>	0	0	×	×

**LED Universal Measuring Probe** 

(LED Flicker Measuring Probes are unsuitable for measurements of CRTs.)